


WIRING DIAGRAMS, ON/OFF MOTOR STARTERS

- Standard Ascent Systems motor starters are housed inside a Type 4X enclosure. The face of the starter has start-stop/reset buttons for exhaust fan control.
- The motor starters include a contactor with a 120 volt

coil (unless otherwise specified). The contactor includes one normally open and one normally closed auxiliary contact block.

- The overload relay includes a variable amperage dial.

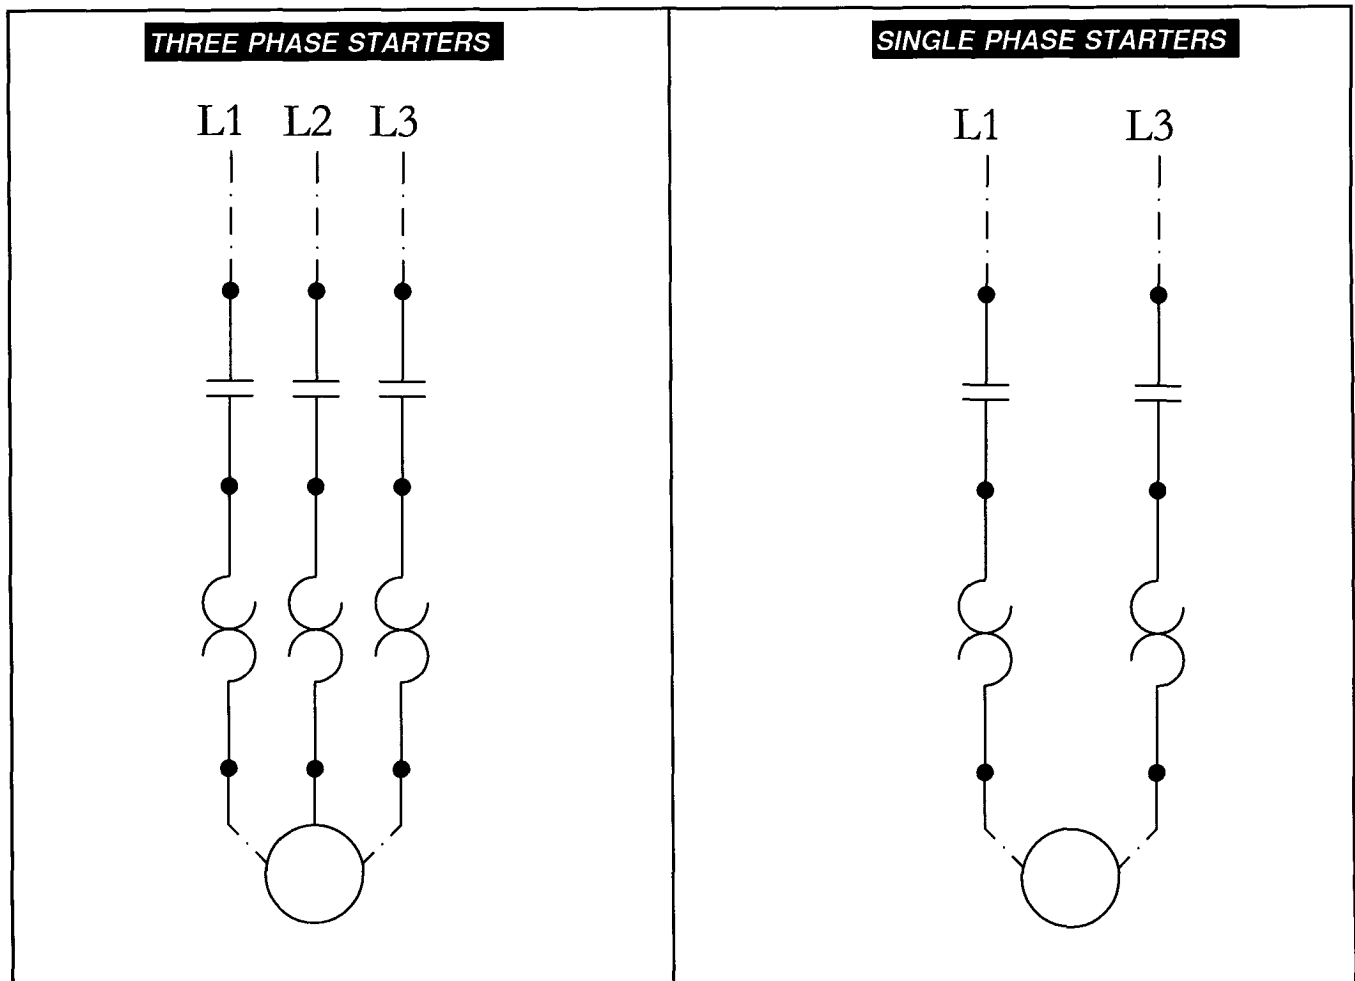

TYPICAL CONTROL WIRING WITH START/STOP CONTROL

